

# SERIES 35-60J



## 24 VAC Microprocessor Based Direct Spark Ignition Control Johnson Controls G76x Series Replacement

35-60J

### FEATURES

- Drop-in replacement for JCI G76x series
- Safe Start and full-time flame sensing
- Custom prepurge and interpurge timings
- Multiple trials for ignition
- Diagnostic LED using Fenwal fault codes
- Three ground terminals for ease of wiring
- Remote or local flame sense options
- Automatic 5 min or 1 hour reset after lockout options



### APPLICATIONS

Directly replaces Johnson Controls G76x in:

- Commercial cooking equipment
- Commercial gas furnaces
- Unit heaters
- Water heaters

Consider the Fenwal 35-60J for DSI applications where a smaller footprint is desirable

### DESCRIPTION

The Fenwal 35-60 "J" Series provides all the features, performance and reliability of our 35-60 Series 24 VAC Direct Spark Ignition control in a Johnson Controls format.

Designed to directly replace the Johnson G76x Series, the Fenwal 35-60J matches the footprint, mounting hole pattern, and wiring connections of the discontinued Johnson series.

### ADVANTAGES

- **Microprocessor control** for precise, repeatable timings and operating sequences
- **Fenwal Platform Design** for easy customization of ignition cycle and timings to appliance requirements
- **High Spark Energy** for fast, dependable burner ignition
- **Superior 120V Flame Sense Signal** provides safe, reliable burner operation (vs. 24V design)
- **On-board diagnostics** with LED display for efficient operation and easy troubleshooting

### Agency Certifications



Design certified to ANSI Z21.20,  
CAN/CSA C22.2 No. 199-M99.

### NOTE:

For the Intermittent Pilot version comparable to the Johnson G77x Series, see Fenwal 35-63J.

### SPECIFICATIONS

Input Power	Control: 18-30 VAC 50/60 Hz (Class 2 Transformer)
Input Current Drain	300 mA @24 VAC with gas relay energized (Control only)
Main Gas Valve	2.0A max (continuous)
Operating Temperature	-40°F to +176°F (-40°C to +80°C)
Storage Temperature	-40°F to +185°F (-40°C to +85°C)
Flame Sensitivity	0.3 $\mu$ A minimum
Flame Failure Response or Re-ignition Time	0.8 seconds maximum
Flame Detector Self-check Rate	Once per second minimum
Types of Gas	Natural, LP, or manufactured
Spark Rate	Remote sense (50/60 Hz) Local sense (25/30 Hz)
Size (LxWXH)	4.92 x 3.32 x 2.71 inches (with cover) 12.50 x 8.43 x 6.88 cm (with cover)
Weight	8 ounces 224 grams (nominal)
Moisture Resistance	Conformal coated to operate to 95% R.H. (non-condensing)
Trials for Ignition	One or three try versions available
Trial for Ignition Periods	4, 6, 8, 10, 15 seconds available
Prepurge Timings	None, 15, or 30 seconds available
Interpurge Timings	None, 15, or 30 seconds available

## SEQUENCE OF OPERATION / FLAME RECOVERY / SAFETY LOCKOUT

### Start Up - Heat Mode

When a call for heat is received from the thermostat supplying 24 volts to THS, the control will reset, perform a self check routine, flash the diagnostic LED once in the first two seconds, and a pre-purge delay begins. Following the pre-purge period, the gas valve is energized and sparks commence for the trial for ignition period.

When flame is detected during the trial for ignition, the sparking process is terminated and the gas valve remains energized. The thermostat and burner flame are constantly monitored to assure the system continues to operate properly. When the thermostat is satisfied and the demand for heat ends, the gas valve is de-energized immediately.

### Failure to Light - Lockout

#### SINGLE TRIAL MODEL

Should the main burner fail to light, or if the burner flame is not detected during the trial for ignition period, the control will go into lockout. The gas valve is de-energized immediately. The LED will indicate the code for ignition lockout.

#### MULTI TRIAL MODEL

Should the main burner fail to light, or if the burner flame is not detected during the first trial for ignition period, the main gas valve is de-energized. The control then goes through an inter-purge delay before another ignition attempt. The control will attempt two additional ignition trials before going into lockout and the gas valve relay will be de-energized immediately.

Recovery from lockout requires a manual reset by either resetting the thermostat or removing 24 volts for a period of 5 seconds. On models with automatic reset, if the thermostat is still calling for heat after 5 minutes the control will automatically reset and attempt to ignite the burner.

### Flame Failure - Recycle Mode (standard)

With "recycle after loss of flame", upon loss of burner flame, the main gas valve is de-energized and the control proceeds to inter-purge before attempting to relight the burner. Multi-try models will allow three tries for ignition including inter-purges. If the burner relights, normal operation resumes. If the burner does not relight, the control will go into lockout as described in "Failure to Light".

### Flame Failure - Re-ignition Mode (optional)

If the established flame signal is lost while the burner is operating, the control will respond within 0.8 seconds by energizing the HV spark in an attempt to relight the burner for the programmed TFI period. If the burner does not light within the TFI, the gas valve is de-energized immediately and on multi-try models a new TFI

sequence begins. If the burner does not relight, the control will lockout as previously described in the "Failure to Light" section. Multi-try models will make two more attempts to light the burner. If flame is re-established, normal operation resumes.

TABLE 1 - FAULT CONDITIONS

LED INDICATION	FAULT MODE
2 Flashes	Flame without call for heat
3 Flashes	Ignition Lockout
Steady On	Internal Control Failure

The LED will flash on for 1/4 second, then off for 1/4 second during a fault condition. The pause between fault codes is 3 seconds.

#### Internal Control Failure:

If the control detects an error in its software or hardware, all outputs are turned off and the LED displays a steady ON condition.

## MOUNTING AND WIRING

The Series 35-60J is not position sensitive and can be mounted vertically or horizontally. The case may be mounted on any surface with #6 sheet metal screws.



#### CAUTION:

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. There are no field replaceable components inside the control. It must be replaced in whole.

TABLE 2 - WIRING TERMINALS

TERMINAL	DESCRIPTION	QUICK CONNECT
THS	Thermostat Input	1/4 inch
MV	Main Valve Power	1/4 inch
_GND	Valve Ground	1/4 inch
GND_	Valve Ground	1/4 inch
GND	System Ground	1/4 inch
BLIND	No Connection	1/4 inch
SENSE	Remote Flame Sensor	1/4 inch
HV	High Voltage Output	Rajah



#### WARNING:

The control must be located and mounted in a manner that protects components from exposure to water (dripping, condensate, spraying, rain). Any control that has been exposed to water must be replaced.



#### WARNING:

All wiring must be done in accordance with both local and national electrical code. Wiring must be at least #18 AWG rated for 105°C or higher.



#### WARNING:

The Series 35-60J uses voltages of shock hazard potential. Wiring and initial operation must be done by a qualified service technician.





#### WARNING:

Operation outside specifications could result in failure of the Fenwal product and other equipment with injury to people and property.





# DIMENSIONS

## With Cover

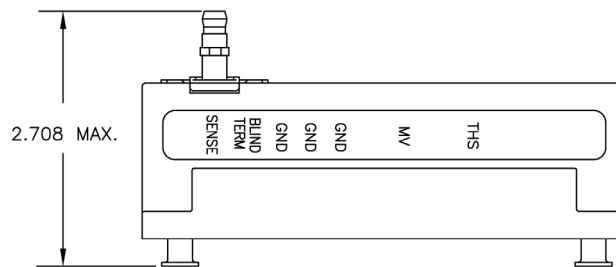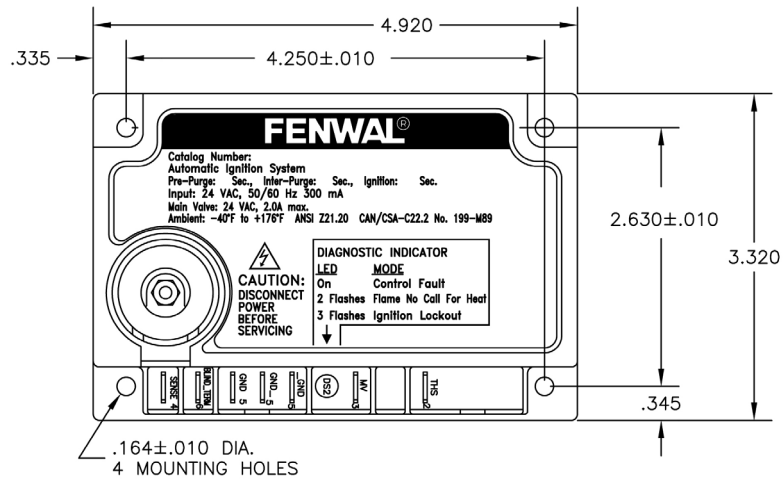

## Without Cover

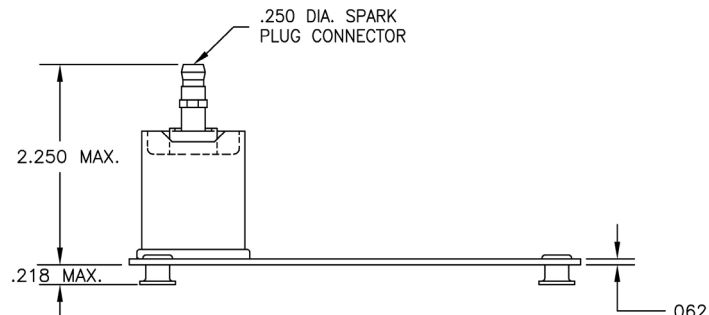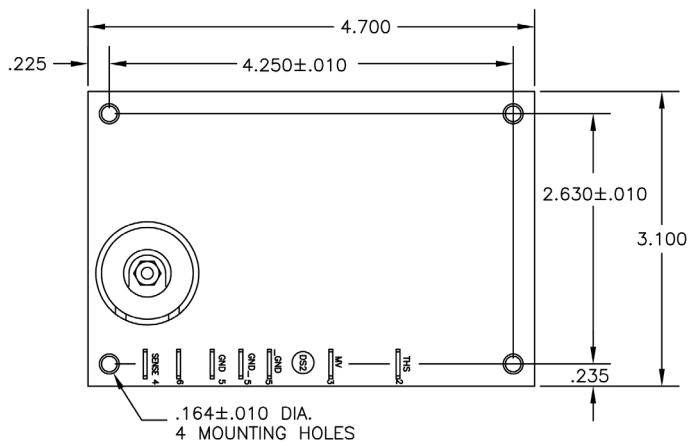

## PART NUMBER CONFIGURATION

# SERIES 35-60 J X X X -X X X

### Options

- 1 = Recycle After Loss of Flame (standard)
- 3 = 1 Hour Auto Reset (in place of 5 minutes)
- 5 = Re-ignition After Flame Loss
- 9 = Special OEM Configuration\*

### \*Non-Standard Configurations

A 9 in this location of the part number (i.e. 35-60J 901-113) identifies this configuration as a non-standard design. The part number does not follow the part numbering system. The 9XX is a sequential part number assigned by Fenwal. Consult factory for operating characteristics of this control.

### Trial for Ignition

- 1 = 4 Seconds
- 3 = 6 Seconds
- 4 = 8 Seconds
- 5 = 10 Seconds
- 7 = 15 Seconds

### Inter-Purge

- 0 = None (Single Try Only)
- 1 = 15 Seconds
- 2 = 30 Seconds

### Pre-Purge

- 0 = None
- 1 = 15 Seconds
- 2 = 30 Seconds

### Tries for Ignition, Flame Sense and Lockout Reset Methods

- |                               |                              |
|-------------------------------|------------------------------|
| 0 = Single Try, Local Sense   | Thermostat / power off reset |
| 1 = Single Try, Remote Sense  | Thermostat / power off reset |
| 2 = Single Try, Local Sense   | 5 minute automatic reset     |
| 3 = Single Try, Remote Sense  | 5 minute automatic reset     |
| 5 = Three Tries, Local Sense  | Thermostat / power off reset |
| 6 = Three Tries, Remote Sense | Thermostat / power off reset |
| 7 = Three Tries, Local Sense  | 5 minute automatic reset     |
| 8 = Three Tries, Remote Sense | 5 minute automatic reset     |

### Enclosure

- 0 = Noryl Gray Enclosure
- 1 = Integral Standoffs
- 2 = Board Only

### NOTES:

Maximum Flame Failure Lockout Time = # of Tries x (Inter-Purge + TFI Time)  
Maximum Valve Sequence Period = # of Tries x TFI Time

**parts4heating**  
800-536-1582 Fax: 866-448-9304  
info@parts4heating.com



FENWAL CONTROLS  
400 MAIN STREET, ASHLAND, MA 01721  
TEL: (508) 881-2000 FAX: (508) 881-6729  
www.fenwalcontrols.com

These instructions do not purport to cover all the details or variations in the equipment described, nor do they provide for every possible contingency to be met in connection with installation, operation and maintenance. All specifications subject to change without notice. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to KIDDE-FENWAL, Inc., Ashland, Massachusetts.